

OCCP Set-up Manual



ALFEN
POWER TO ADAPT

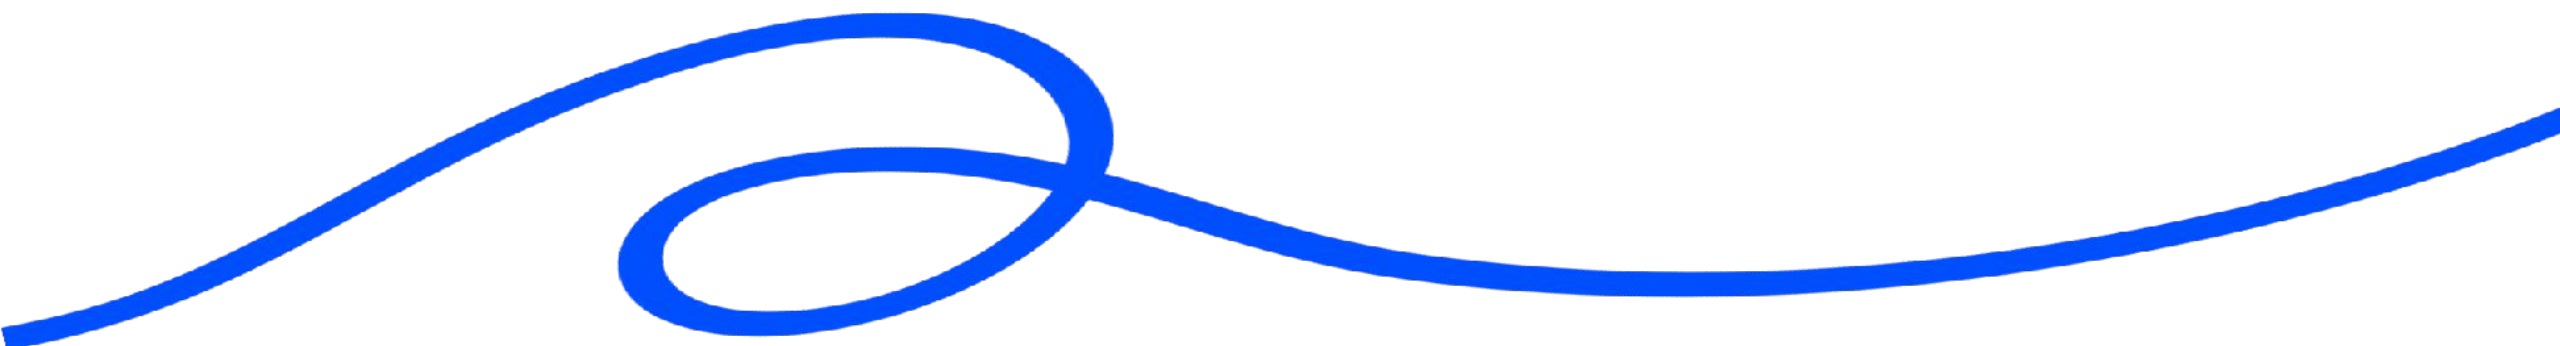


Table of content

- Introduction
- Step by step guide to connect your AHP Alfen charging device to Mobiflow

Introduction

This document describes how you need to connect your AHP Alfen charging devices via OCPP to the Mobiflow backend by using the Alfen ACE installer. Please insert the Mobiflow SIM card in the SIM card slot of the Alfen charging device (*please consult the device manual for the location of the SIM card slot*).

Firstly, you will need to download and install the Alfen ACE installer on your laptop: [Alfen N.V.](#)

Secondly, you will need to request a login and sign up for an account:

[Log in - Service Desk \(alfen.com\)](#)

Log in

Customer Service Portal Login


By creating an account and accessing the Customer Service Portal, you accept the Customer Service Portal Terms & Conditions.

These Customer Service Portal Terms & Conditions can be accessed and read here.

☒ Keep me logged in[Forgot your password?](#)[Sign up for an account](#)

Step by step guide to connect your AHP Alfen device to Mobiflow using the ACE service installer


1. After you have received your login credentials,
2. open the ACE service installer app and log in.

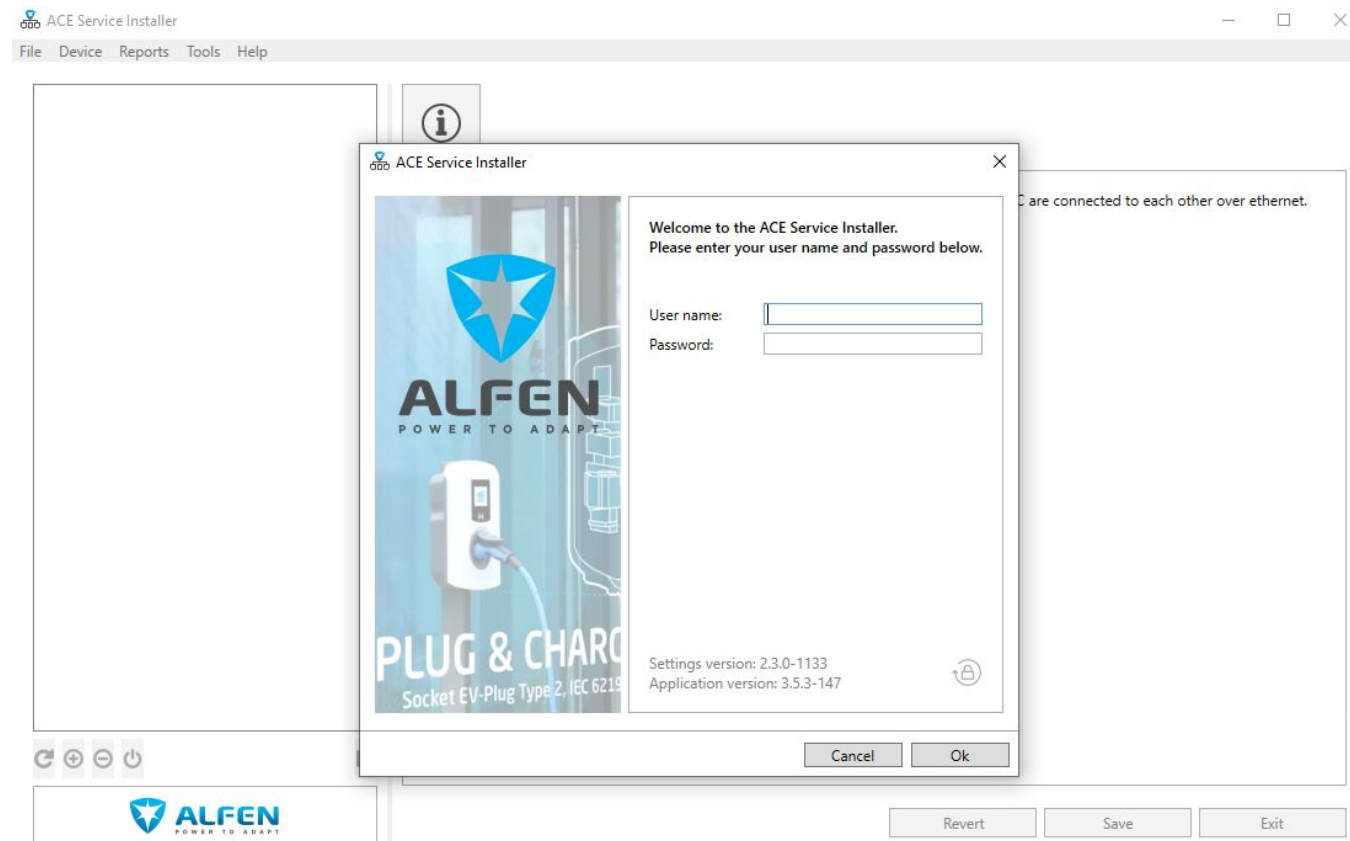

Step by step guide to connect your AHP Alfen device to Mobiflow with the ACE service installer

3. The ACE service installer requires a password. This password is specified on a sticker inside the box.

If there is no sticker inside the box containing the password, the password can also be found online in the Alfen webshop. However, the webshop can only be accessed by the person who has ordered the charging device directly from Alfen. If you have bought the device from a wholesaler, it is the wholesaler who is able to access the shop.

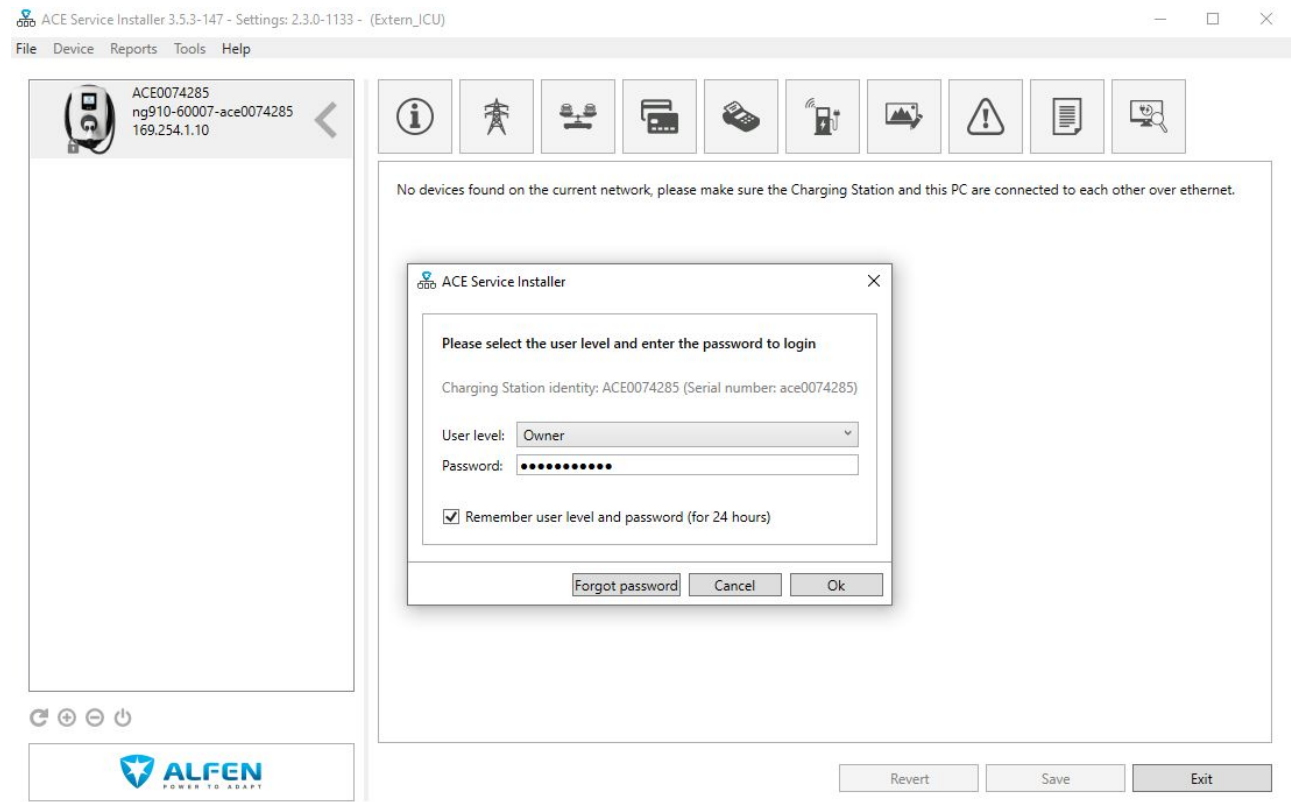

Step by step guide to connect your AHP Alfen device to Mobiflow with the ACE service installer


4. Let the program update the preset list during startup and open the list of available presets.
5. Search for the Optimile Simpoint preset.
6. Apply this preset to the AHP Alfen device.

If the Optimile Simpoint preset is not visible please follow the steps below.

If the Optimile simpoint preset is not visible

7. Open the firmware upload in the Ace service installer.
8. Download the attached AHP_OPTIMILE_SIMPOINT_CFG.tcf file.
9. Load the file as firmware for the charging device.
10. Apply our configuration manually to the device by configuring the following link into the Alfen device.
<wss://proxy.optimile.eu/services/ocp>


The above steps may not be necessary, though it could be used as a potential troubleshooting step if the connection fails.

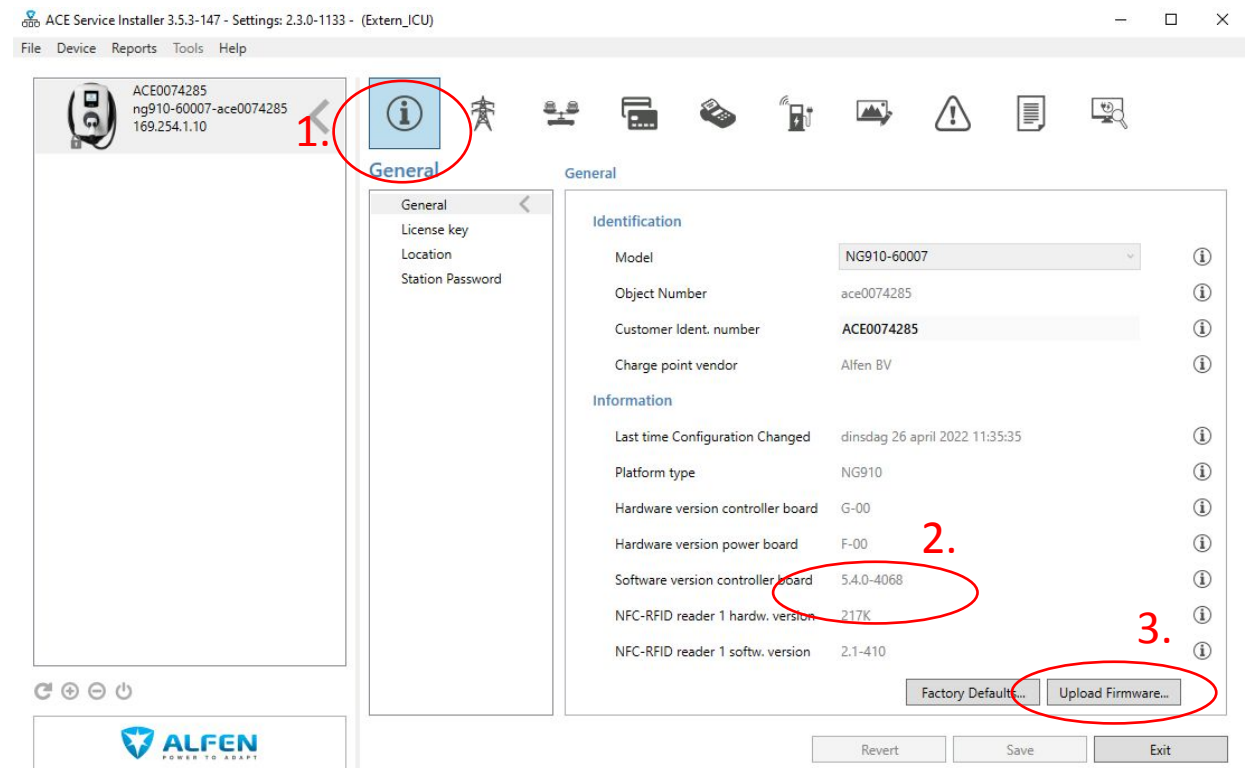

Step by step guide to connect your AHP Alfen charging device to Mobiflow with the ACE installer

11. Go to the connectivity tab.
12. Select the backoffice preset: Optimile Simpoint under 'general'

! Always click on save below !

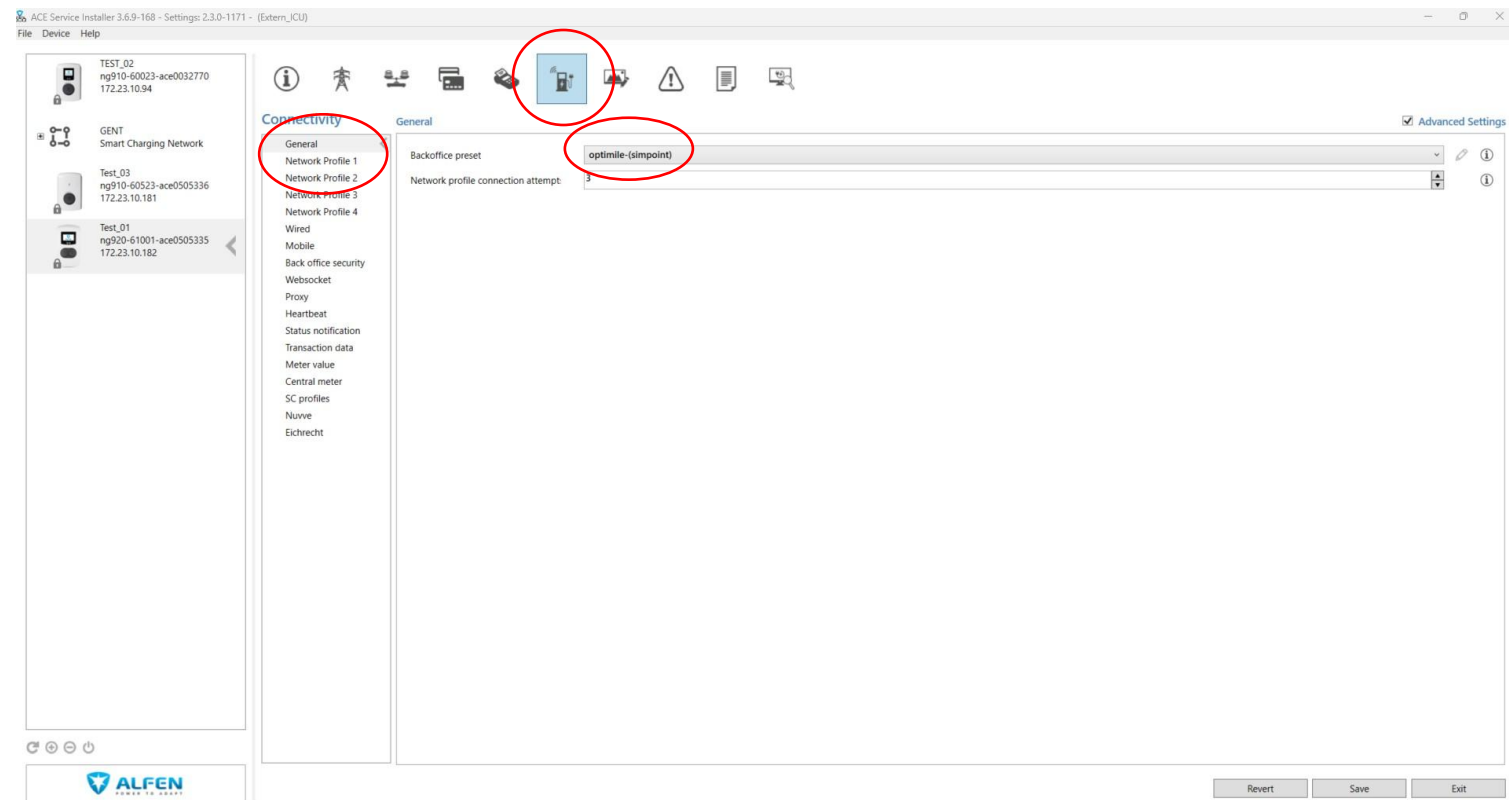


Step by step guide to connect your AHP Alfen charging device to Mobiflow with the ACE installer

13. Select 'Network profile 1'. (Depending on how the charging station is connected via UTP or SIM --> select wired or mobile next to connect method respectively.)

14. Select OCPP 1.6 next to 'protocol'.

! Always click on save below !

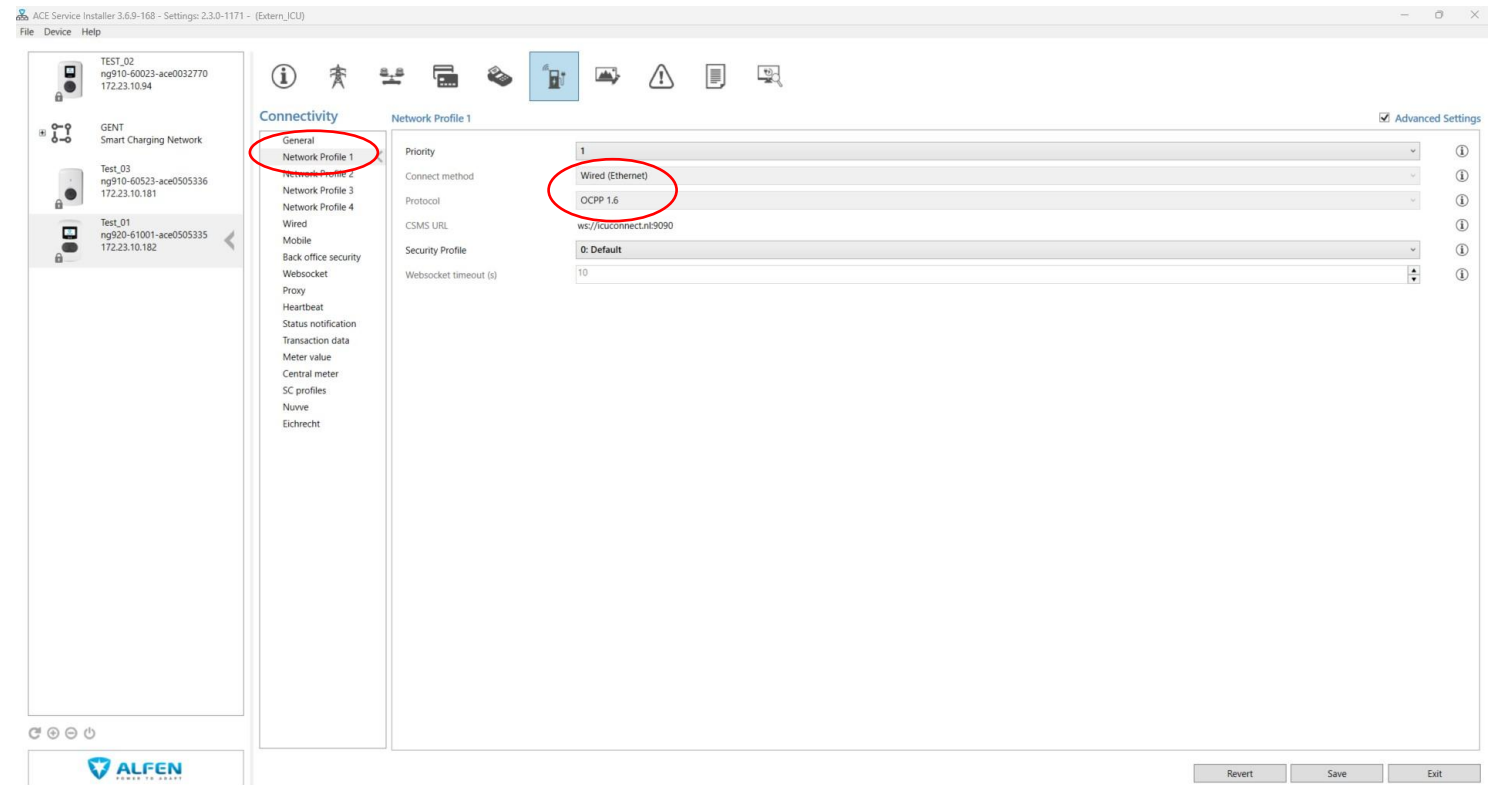


Step by step guide to connect your AHP Alfen charging device to Mobiflow with the ACE installer

Optional: (If you have more than 1 connection type)

15. Select 'Network profile 2'. (Depending on how the charging station is connected via UTP or SIM --> select wired or mobile next to connect method respectively.)
16. Select OCPP 1.6 next to 'protocol'.
17. If the protocol is not used indicate it accordingly


Note: select your priorities between the active profiles.

! Always click on save below !

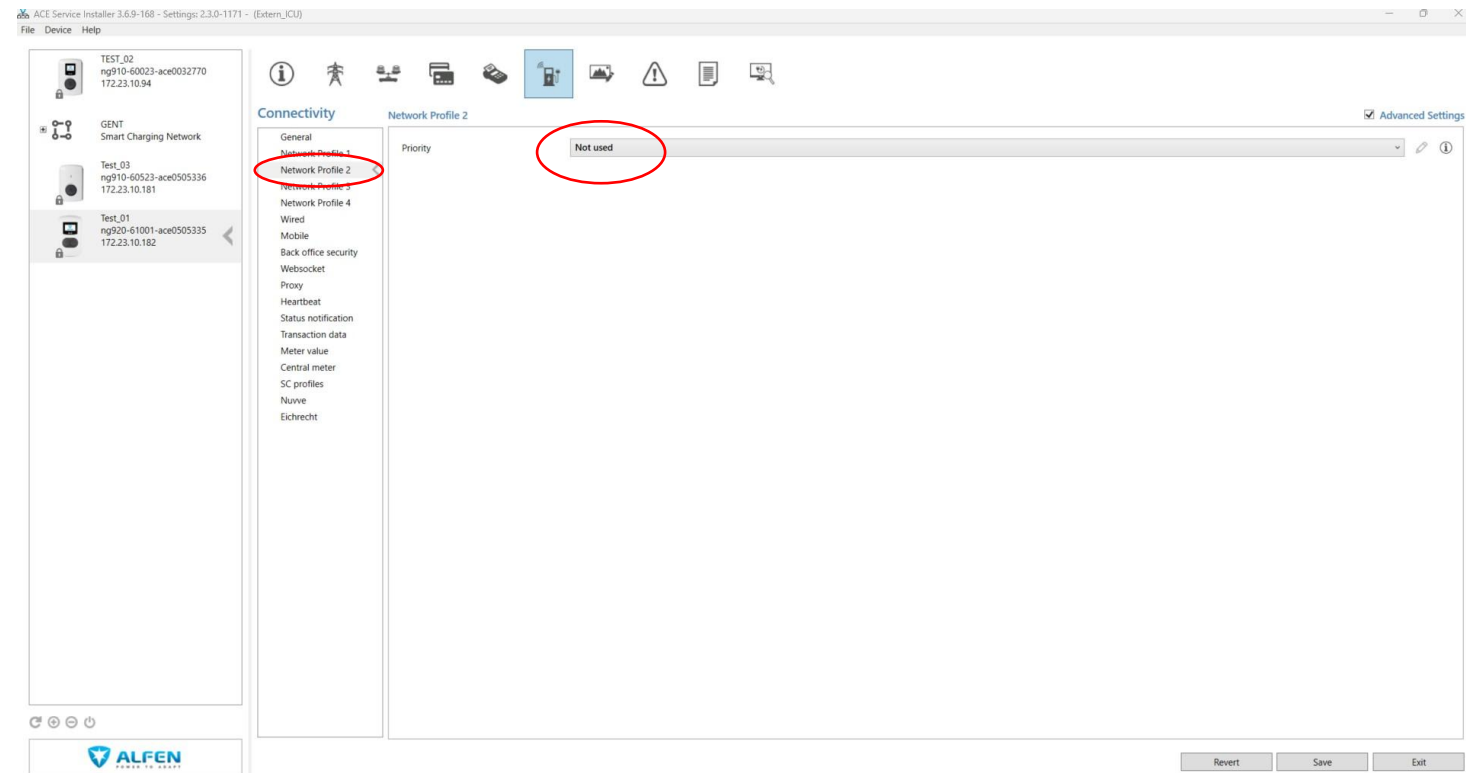

Step by step guide to connect your AHP Alfen charging device to Mobiflow with the ACE installer


18. Reboot the device and click “Yes”. The device will restart with all the new settings, but only if you have clicked “Save” after each step.

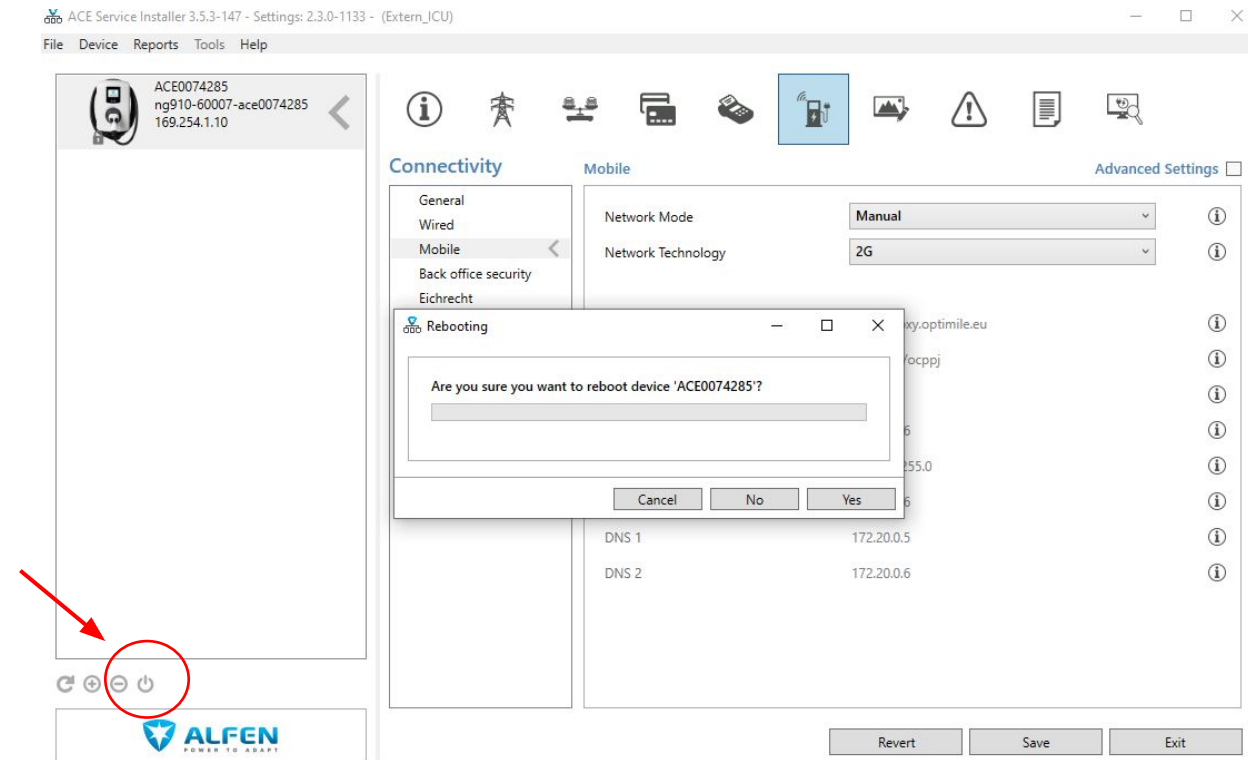

Step by step guide to connect your AHP Alfen charging device to Mobiflow with the ACE installer

19. Go to the logging tab to check if there is a connection with the Mobiflow backend.


If you see a lot of green text with a two arrow logo, that means the device is sending data. Refresh the logging if necessary.

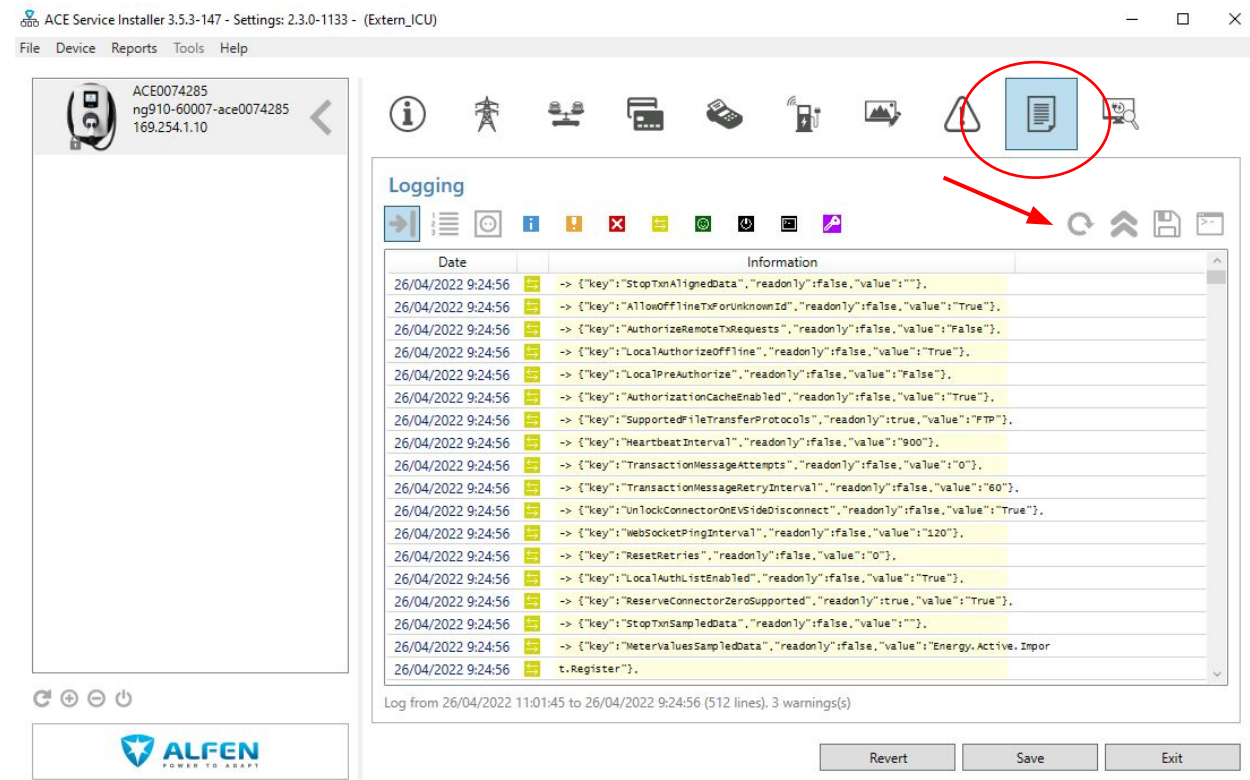

Step by step guide to connect your AHP Alfen charging device to Mobiflow with the ACE installer

20. Go to the QA platform* and confirm the device.

* If you do not have a QA login, please check the website to get your login: [Toegang tot het QA platform aanvragen | Mobiflow](#) and the QA manual and how to confirm the device.

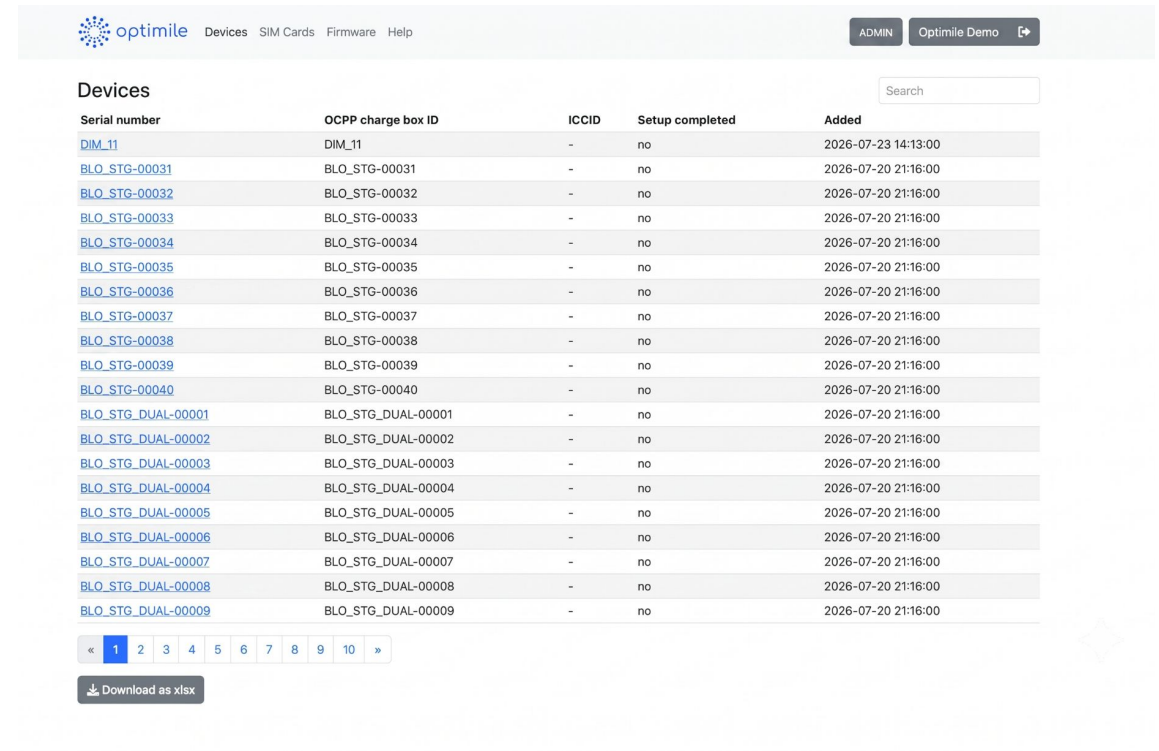

Serial number	OCPP charge box ID	ICCID	Setup completed	Added
DIM_11	DIM_11	-	no	2026-07-23 14:13:00
BLO_STG-00031	BLO_STG-00031	-	no	2026-07-20 21:16:00
BLO_STG-00032	BLO_STG-00032	-	no	2026-07-20 21:16:00
BLO_STG-00033	BLO_STG-00033	-	no	2026-07-20 21:16:00
BLO_STG-00034	BLO_STG-00034	-	no	2026-07-20 21:16:00
BLO_STG-00035	BLO_STG-00035	-	no	2026-07-20 21:16:00
BLO_STG-00036	BLO_STG-00036	-	no	2026-07-20 21:16:00
BLO_STG-00037	BLO_STG-00037	-	no	2026-07-20 21:16:00
BLO_STG-00038	BLO_STG-00038	-	no	2026-07-20 21:16:00
BLO_STG-00039	BLO_STG-00039	-	no	2026-07-20 21:16:00
BLO_STG-00040	BLO_STG-00040	-	no	2026-07-20 21:16:00
BLO_STG_DUAL-00001	BLO_STG_DUAL-00001	-	no	2026-07-20 21:16:00
BLO_STG_DUAL-00002	BLO_STG_DUAL-00002	-	no	2026-07-20 21:16:00
BLO_STG_DUAL-00003	BLO_STG_DUAL-00003	-	no	2026-07-20 21:16:00
BLO_STG_DUAL-00004	BLO_STG_DUAL-00004	-	no	2026-07-20 21:16:00
BLO_STG_DUAL-00005	BLO_STG_DUAL-00005	-	no	2026-07-20 21:16:00
BLO_STG_DUAL-00006	BLO_STG_DUAL-00006	-	no	2026-07-20 21:16:00
BLO_STG_DUAL-00007	BLO_STG_DUAL-00007	-	no	2026-07-20 21:16:00
BLO_STG_DUAL-00008	BLO_STG_DUAL-00008	-	no	2026-07-20 21:16:00
BLO_STG_DUAL-00009	BLO_STG_DUAL-00009	-	no	2026-07-20 21:16:00